

Parts list for B, C, D categories including B0104a, B0123, B0124a, B0431a, B0432a, C0107Dc, C0264, C0270c, C0271c, C0529Ac, C0601, C0601/1a, C0605, C0801Hc, D0602, D0807b.

E-Parts

Parts list for E categories including E0135-Bc, E0155b, E0159b, E0160c, E0161c, E0162b, E0163, E0164, E0165, E0166, E0167, E0175, E0168, E0169, E0170, E0171, E0176.

B, C, D-Parts

Parts list for B, C, D categories including B0104a, B0123, B0124a, B0431a, B0432a, C0107Dc, C0264, C0270c, C0271c, C0529Ac, C0601, C0601/1a, C0605, C0801Hc, D0602, D0807b.

E-Parts

Parts list for E categories including E0135-Bc, E0155b, E0159b, E0160c, E0161c, E0162b, E0163, E0164, E0165, E0166, E0167, E0175, E0168, E0169, E0170, E0171, E0176.

MBX8TR Parts List (E2029)

Parts list for MBX8TR categories including E0174b, E0183b, E0210b, E0219c, E0221, E0238c, E0239c, E0240c, E0241c, E0242, E0319b, E0322h, E0517b, E0518b, E0519b, E0520b, E0545c, E0546c, E0548d, E0551, E0552, E0553, E0558, E0559, E0560, E0554, E0555, E0556, E0561, E0562, E0563, E0564, E0565, E0566, E0567, E0568, E0569.

Parts list for MBX8TR categories including E0174b, E0175, E0176, E0183b, E0210b, E0219c, E0221, E0238c, E0239c, E0240c, E0241c, E0242, E0319b, E0322h, E0517b, E0518b, E0519b, E0520b, E0545c, E0546c, E0548d, E0551, E0552, E0553, E0558, E0559, E0560, E0554, E0555, E0556, E0561, E0562, E0563, E0564, E0565, E0566, E0567, E0568, E0569.

1/8スケール MBX8TR パーツリスト (E2029)

Parts list for 1/8 scale MBX8TR categories including E0571, E0572, E0573, E0574, E0581, E0575, E0576, E0577, E0578, E0582, E0601a, E0601/1b, E0602a, E0602/1a, E0701b, E0705a, E0803a, E0806a, E0808c, E0813b, E0814b, E0825-Bb, E0829c, E0834b, E0835, E0903, E1081Wa.

Parts list for 1/8 scale MBX8TR categories including E0571, E0572, E0573, E0574, E0581, E0575, E0576, E0577, E0578, E0582, E0601a, E0601/1b, E0602a, E0602/1a, E0701b, E0705a, E0803a, E0806a, E0808c, E0813b, E0814b, E0825-Bb, E0829c, E0834b, E0835, E0903, E1081Wa.

1/8スケール MBX8TR パーツリスト (E2029)

Parts list for 1/8 scale MBX8TR categories including E1081Ya, E1081Ba, E1084, E2115b, E2116, E2120h, E2121Bc, E2123h, E2124b, E2136, E2137, E2138, E2139, E2142c, E2143c, E2143e, E2146c, E2147c, E2148c, E1081Ya, E1081Ba, E1084, E2115b, E2116, E2120h, E2121Bc, E2123h, E2124b, E2136, E2137, E2138, E2139, E2142c, E2143c, E2143e, E2146c, E2147c, E2148c.

Parts list for 1/8 scale MBX8TR categories including E1081Ya, E1081Ba, E1084, E2115b, E2116, E2120h, E2121Bc, E2123h, E2124b, E2136, E2137, E2138, E2139, E2142c, E2143c, E2143e, E2146c, E2147c, E2148c.

1/8スケール MBX8TR パーツリスト (E2029)

Parts list for 1/8 scale MBX8TR categories including E2149c, E2150c, E2153c, E2158c, E2161c, E2162c, E2163c, E2164c, E2165b, E2166b, E2167b, E2168c, E2172a, E2173b, E2149c, E2150c, E2153c, E2158c, E2161c, E2162c, E2163c, E2164c, E2165b, E2166b, E2167b, E2168c, E2172a, E2173b.

Parts list for 1/8 scale MBX8TR categories including E2149c, E2150c, E2153c, E2158c, E2161c, E2162c, E2163c, E2164c, E2165b, E2166b, E2167b, E2168c, E2172a, E2173b.

Rev.2603

Parts list for Rev.2603 categories including E2174b, E2177b, E2178b, E2179b, E2182b, E2182A/Ba, E2182L, E2182R, E2186a, E2187a, E2188b, E2189b, E2230, E2231, E2232c, E2234c, E2235c, E2236c, E2237b, E2238c, E2174b, E2177b, E2178b, E2179b, E2182b, E2182A/Ba, E2182L, E2182R, E2186a, E2187a, E2188b, E2189b, E2230, E2231, E2232c, E2234c, E2235c, E2236c, E2237b, E2238c.

Parts list for Rev.2603 categories including E2174b, E2177b, E2178b, E2179b, E2182b, E2182A/Ba, E2182L, E2182R, E2186a, E2187a, E2188b, E2189b, E2230, E2231, E2232c, E2234c, E2235c, E2236c, E2237b, E2238c.

E2240c, E2241b, E2242c parts list with diagrams and quantities.

E2301c parts list with diagrams and quantities.

E2421c, E2422c, OPT parts list with diagrams and quantities.

E2568a, E2569c, E2571, OPT parts list with diagrams and quantities.

E2715b, E2716b, E2717b, E2718b parts list with diagrams and quantities.

H,T-Parts parts list with diagrams and quantities.

E2243b parts list with diagrams and quantities.

E2303c parts list with diagrams and quantities.

E2429b parts list with diagrams and quantities.

E2572c, E2573b, E2574c parts list with diagrams and quantities.

E2719b, E2720b, E2721b, E2722a parts list with diagrams and quantities.

H0274b, H0471b, H0855c, H0864-Ba parts list with diagrams and quantities.

E2245-Ba parts list with diagrams and quantities.

E2306c, E2309c, E2310c, OPT parts list with diagrams and quantities.

E2430b, E2431b, OPT parts list with diagrams and quantities.

E2577b parts list with diagrams and quantities.

E2723b parts list with diagrams and quantities.

H2724b, H2810b, T2805c parts list with diagrams and quantities.

E2250c, OPT parts list with diagrams and quantities.

E2314c, E2316b parts list with diagrams and quantities.

E2434b parts list with diagrams and quantities.

E2579a parts list with diagrams and quantities.

E2724, OPT, E2725, OPT parts list with diagrams and quantities.

H2803c, E2804c parts list with diagrams and quantities.

E2260b, E2263c, E2264c parts list with diagrams and quantities.

E2319b, E2320b parts list with diagrams and quantities.

E2504c, E2505b, E2506b parts list with diagrams and quantities.

E2580a parts list with diagrams and quantities.

E2805c parts list with diagrams and quantities.

E2808b, E2809c parts list with diagrams and quantities.

E2265 parts list with diagrams and quantities.

E2321b, E2322b, OPT parts list with diagrams and quantities.

E2507, E2510, OPT parts list with diagrams and quantities.

E2581 parts list with diagrams and quantities.

E2815c, OPT, E2816c parts list with diagrams and quantities.

E2817b, OPT, E2826a parts list with diagrams and quantities.

E2266 parts list with diagrams and quantities.

E2324, OPT, E2325, OPT, E2326, OPT parts list with diagrams and quantities.

E2515, E2516, E2517, E2518, OPT parts list with diagrams and quantities.

E2523a, E2524b, E2525c parts list with diagrams and quantities.

E2817b, OPT, E2826a parts list with diagrams and quantities.

E2817b, OPT, E2826a parts list with diagrams and quantities.

E2267b, OPT, E2268b parts list with diagrams and quantities.

E2327b, E2328b parts list with diagrams and quantities.

E2526c, E2530a, E2534c parts list with diagrams and quantities.

E2581 parts list with diagrams and quantities.

E2815c, OPT, E2816c parts list with diagrams and quantities.

E2817b, OPT, E2826a parts list with diagrams and quantities.

E2269b parts list with diagrams and quantities.

E2329b, E2330a parts list with diagrams and quantities.

E2535c, E2548b, E2564b parts list with diagrams and quantities.

E2581 parts list with diagrams and quantities.

E2815c, OPT, E2816c parts list with diagrams and quantities.

E2817b, OPT, E2826a parts list with diagrams and quantities.

E2271b, E2272, OPT parts list with diagrams and quantities.

E2416-Bb parts list with diagrams and quantities.

E2523a, E2524b, E2525c parts list with diagrams and quantities.

E2581 parts list with diagrams and quantities.

E2815c, OPT, E2816c parts list with diagrams and quantities.

E2817b, OPT, E2826a parts list with diagrams and quantities.

E2270c, OPT parts list with diagrams and quantities.

E2419c, OPT, E2420b, OPT parts list with diagrams and quantities.

E2523a, E2524b, E2525c parts list with diagrams and quantities.

E2581 parts list with diagrams and quantities.

E2815c, OPT, E2816c parts list with diagrams and quantities.

E2817b, OPT, E2826a parts list with diagrams and quantities.

- E2301c SERVO SAVER
E2303c RADIO PLATE MOUNT
E2306c SERVO SAVER PIPE
E2309c BRAKE DISC
E2310c AL SERVO SAVER ARM
E2314c GASKET FOR DIFF. (H.T. DIFF.)
E2316b SERVO SAVER SPRING (HARD)
E2319b SERVO SAVER SHAFT
E2320b SERVO SAVER SPRING ADJUSTER
E2321b BRAKE CAM
E2322b SERVO SAVER SHAFT (ALUM)
E2324 BATTERY CONNECTOR HOLDER
E2325 ELECTRIC SWITCH HOLDER (FUTABA,SANWA)
E2326 ELECTRIC SWITCH HOLDER (Protek,G-Force)
E2327b BATTERY BOX (Large)
E2328b RECEIVER BOX
E2329b RADIO TRAY
E2330a BRAKE PAD SPRINGS
E2416-Bb STONE GUARD
E2419c DIFF. GEAR 20
E2420b WEIGHT 40g

- E2421c FRONT BUMPER
E2422c REAR WING STAY
E2429b REAR WING MOUNT (+15)
E2430b AL WING BUTTONS
E2431b REAR WING MOUNT PLATE CFRP
E2434b CHASSIS
E2504c DAMPER END BALL
E2505b STEERING PLATE
E2506b DAMPER BOOTS L
E2507 FRONT DAMPER SPRING φ1.5 L70/8.25T
E2510 FRONT DAMPER SPRING φ1.5 L70/7.5T
E2515 FRONT DAMPER SPRING φ1.6 L70/9.5T
E2516 FRONT DAMPER SPRING φ1.6 L70/9.25T
E2517 FRONT DAMPER SPRING φ1.6 L70/9.0T
E2518 FRONT DAMPER SPRING φ1.6 L70/8.75T
E2523a DAMPER SPRING ADJUSTER
E2524b DIAPHRAGM
E2525c DAMPER PISTON (φ1.3/8H)
E2526c FRONT DAMPER CASE
E2530a AS-018 O-RINGS
E2534c DAMPER PISTON (φ1.35/5H)
E2535c DAMPER PISTON (φ2.1/8H)
E2548b REAR DAMPER CASE
E2564b SHOCK PIN

- E2568a REAR DAMPER STAY
E2569c DAMPER PISTON (φ1.3/6H)
E2571 REAR DAMPER STAY CFRP
E2572c EMULSION DAMPER CAP
E2573b EMULSION DAMPER CAP SEAL
E2574c OW2x4x0.5 AL WASHER
E2577b FRONT SHOCK SET
E2579a FRONT SHOCK TOWER
E2580a REAR SHOCK SET
E2581 REAR SHOCK SPRING φ1.6 L86/9T
E2601a 5x10x4 NMB BEARINGS (2pcs.)
E2601/1a 5x10x4 NMB BEARINGS (10pcs.)
E2602 8x16x5 NMB BEARINGS (2pcs.)
E2602/1 8x16x5 NMB BEARINGS (10pcs.)
E2712c ENGINE MOUNT WASHER
E2713c ONE-PIECE ENGINE MOUNT
E2714b FLYWHEEL (4-shoe)

- E2715b FLYWHEEL NUT (4-shoe)
E2716b CLUTCH PINS (4-shoe)
E2717b CARBON CLUTCH SHOES (4-shoe)
E2718b AL CLUTCH SHOES (4-shoe)
E2719b CLUTCH BELL 13T (4-shoe)
E2720b CLUTCH SPRINGS 0.9mm (4-shoe)
E2721b CLUTCH SPRINGS 0.95mm (4-shoe)
E2722a CLUTCH SPRINGS 1.0mm (4-shoe)
E2723b CLUTCH SET (4-shoe)
E2724 AL CLUTCH SHOES 1dot (4-shoe)
E2725 AL CLUTCH SHOES 2dot (4-shoe)
E2803c SERVO HORN
E2804c PIVOT BALL
E2805c LINKAGE PARTS
E2808b ANTENNA PIPE (150mm)
E2809c FUEL TANK CAP PULLER
E2815c AL SERVO HORN TH SET
E2816c FUEL TANK
E2817b P2 O-RINGS
E2826a BRAKE SPRINGS
FP2155 FP01 TRUGGY BODY

PO402b 12 LOGO STICKER
PO403b 12 LOGO STICKER (METALLIC)
MUGEN SEIKI CO., LTD.
1395 Takane-Cho, Futatabi-Cho, 274-0897, Japan