

Kit Bag A1 (manual page 3~7)



H2167 1pcs.

H2072-B 2pcs.

H2223 2pcs.

H2158-B 2pcs.

H2427B 1pc.

H2151-C 2pcs.

**H0515 2pcs.
(1.8-5.0)**

H2229A 2pcs.

H2604 1pc.

H0368 1pc.

H0273 4pcs.

H2720-B 1pc.

H2722 1pc.

H0240 1pc.

H2211 1pc.

H2216 1pc.

**B0326Z
(Silicone oil #600) 1pc.**

**B330Z
(super joint grease) 1pc.**

Kit Bag B1 (manual page 8~10)



H2323A 1pc.

H0362D 2pcs.
H0362E 2pcs.
H0362F 2pcs.

D0105R 4pcs.

T2803 2pcs.

E2808/50(50mm) 1pc.

H0144 4pcs.

H0145 4pcs.

A2807 1pc.

T2804S-B 2pcs.

H2802 3pcs.

H2804 2pcs.

H0294 1pc.

B0432 1pc.

H0181B-G 5pcs. (1mm)

H2161L 1pc.

H2161R 1pc.

H2425 1pc.

H2220 1pc.

H0142-B 1pc.

H2228 1pc.

E0322 1pc.

S04 0-Ring 3pcs.

SiG602 2pcs.

SiG3x6 1pc.

SiG3x8 3pcs.

SiG3x18 1pc.

SiG3x10 6pcs.

SiG3x14 4pcs.

SiG2x6 4pcs.

SiG2x16 4pcs.

SiG3x5 4pcs.

SiG3x6 8pcs.


SiG3x8 5pcs.

SiG4x10 2pcs.


SK3x5 1pc.

SK4x5 2pcs.


Kit Bag D1 (manual page 15-17)

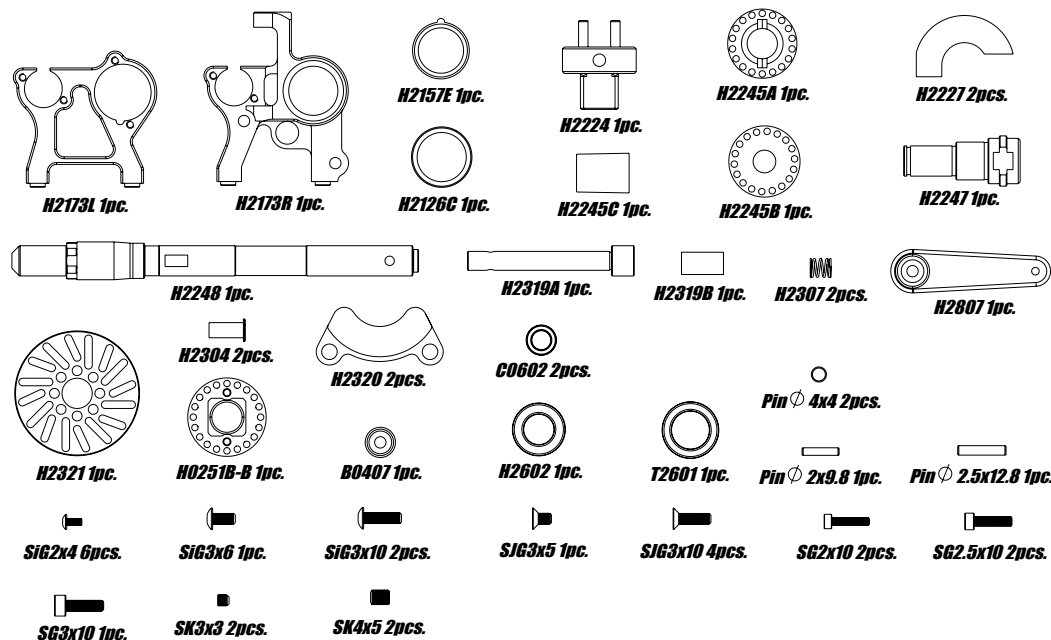


Kit Bag F1 (manual page 22-26)

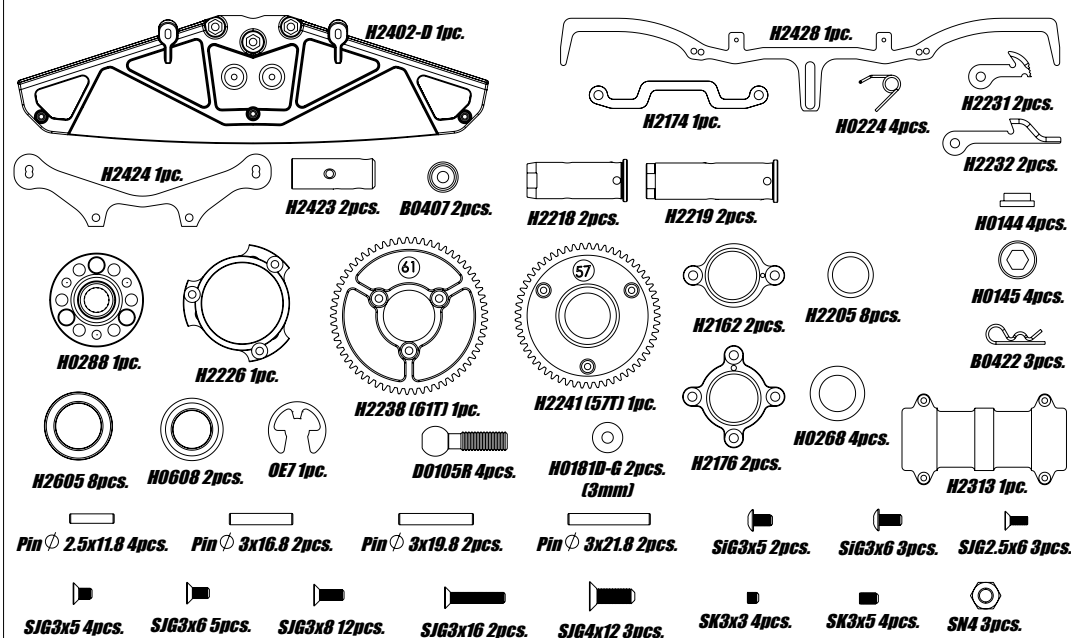


Kit Bag E1 (manual page 18-22)

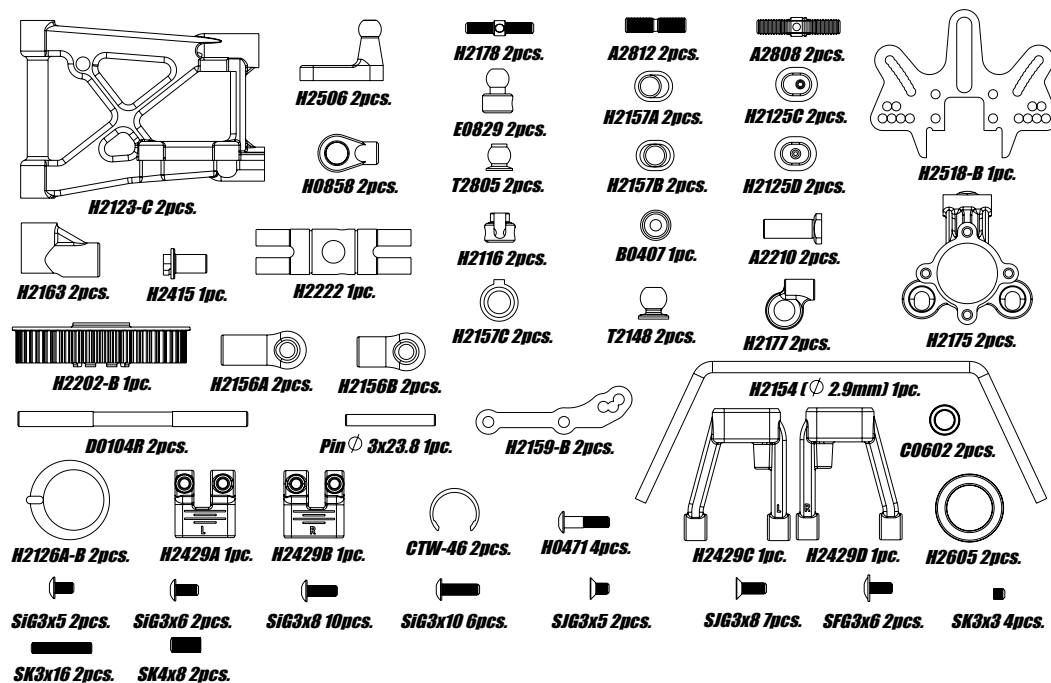


Kit Bag G1 (manual page 27-33)

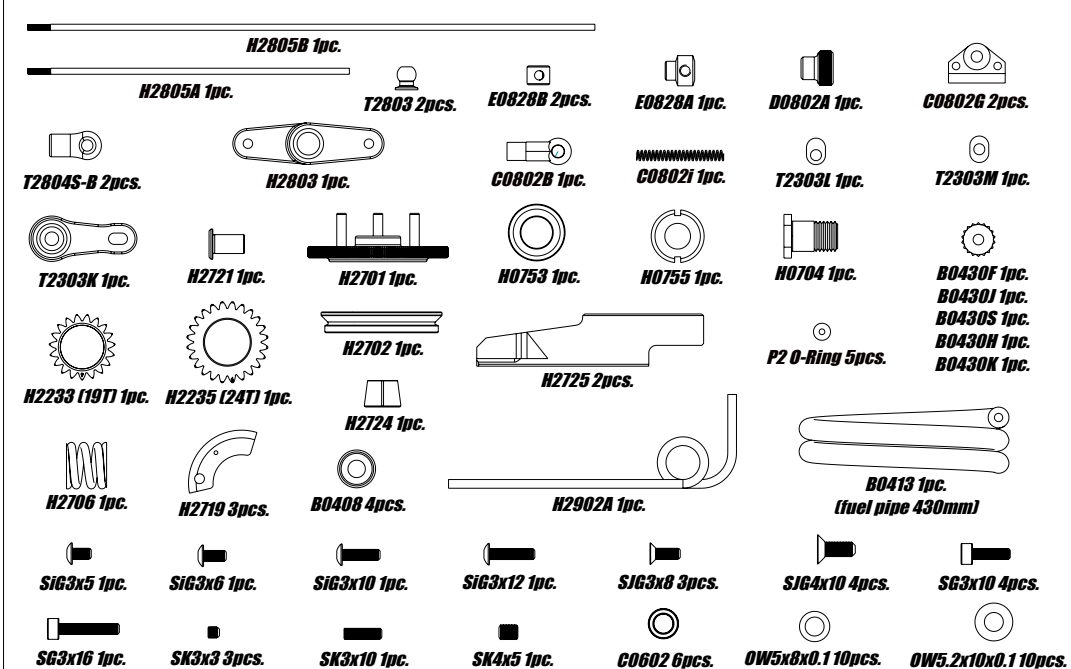

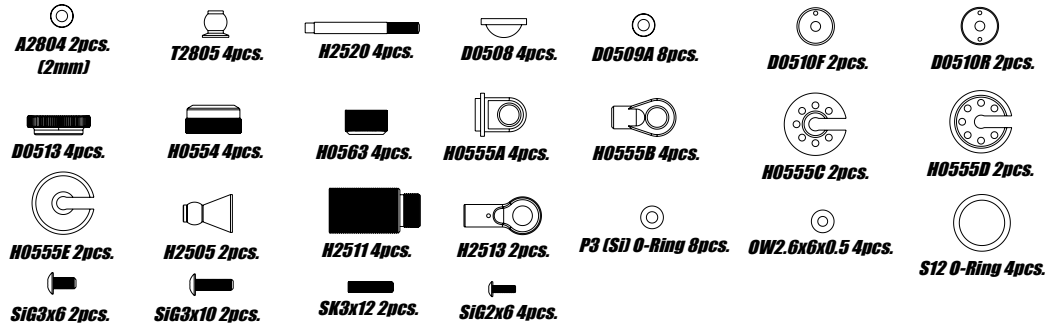Kit Bag H1 (manual page34~35)**Kit Bag i1** *(manual page36)*


P0402 1pc.

Fuel tank

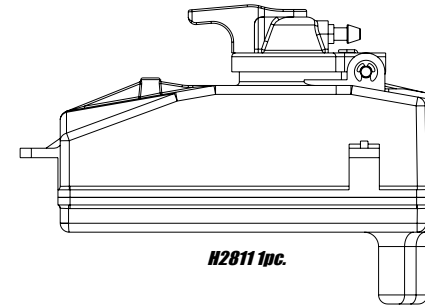**H2811 1pc.**

Notes:

Chassis

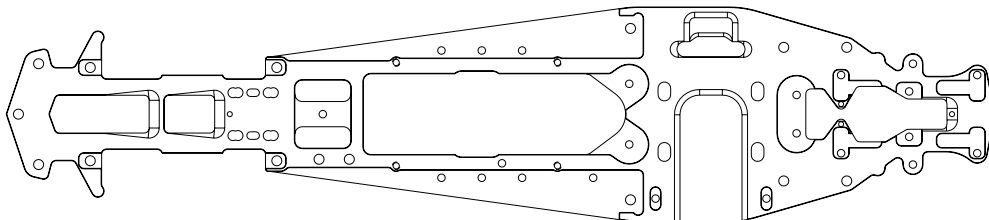

H2427A 1pc.